

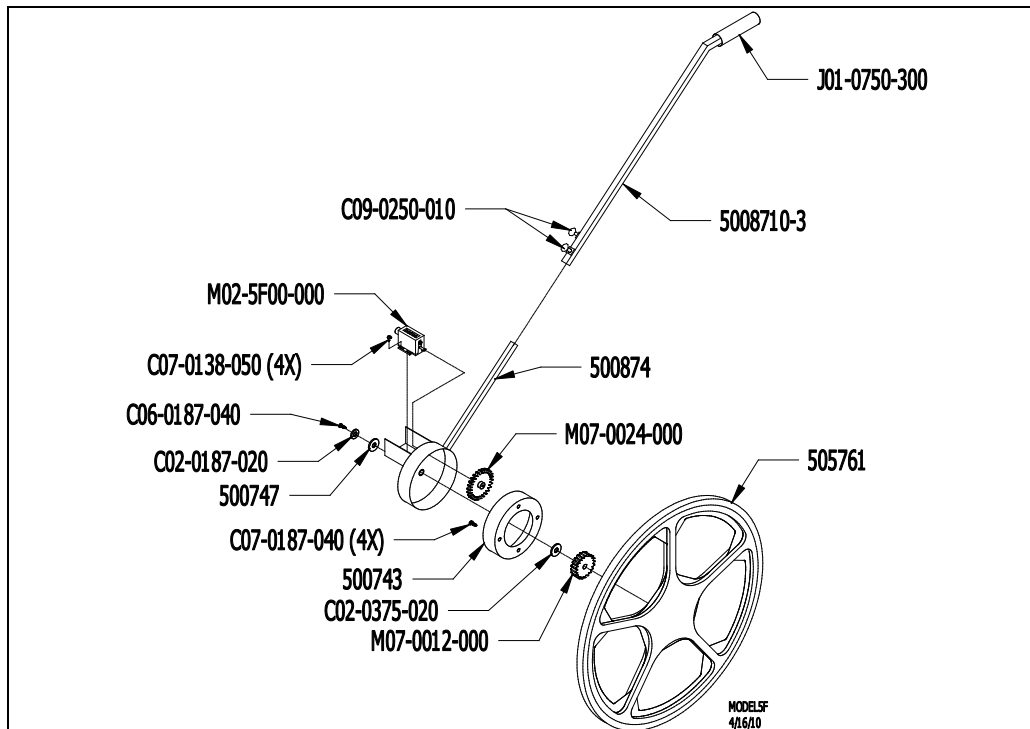 


Illustrated Parts & Packing List

815 Rice Lake Street, Owatonna, MN 55060

For a complete distributor & dealer list go to www.gandy.net

Model 5F 5 Foot Circumference Measuring Wheel Reads in Feet (All Assembled Except for Telescoping Handle)



 
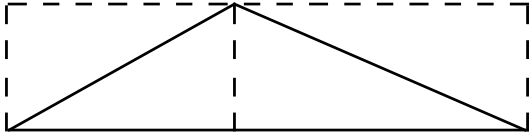
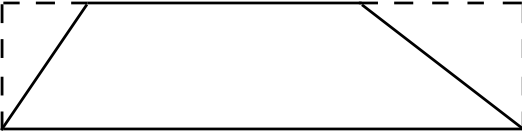

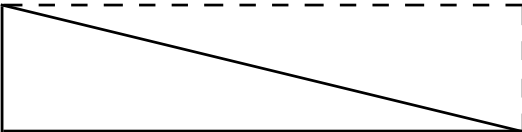
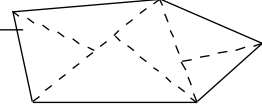
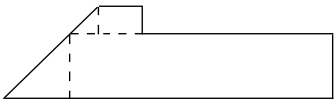
One Carton Containing:

- | | | |
|--------|-------------------|---|
| 1..... | 505761..... | Measuring Wheel w/Tire 5F |
| | | Use: 1 SAE Washer (3/16) (C02-0187-020) |
| | | 1 SAE Washer (3/8) (C02-0375-020) |
| | | 1 Button HD Socket Set Screw, Nylock (#10-24 x 3/8) (C06-0187-040) |
| | | 1 Decal, Measuring Wheel Model 5F (N02-0050-010) |
| 1..... | 500743..... | Inner Cup Wheel Hub |
| | | Use: 4 Phillips Head Sheet Metal Screw (#10-16 x 5/16) (C07-0187-040) |
| 1..... | 5008710-3..... | Upper Handle |
| | | Use: 1 Grip Black (3/4 x3) (J01-0750-300) |
| | | 2 Thumb Screw (1/4 x 1/2) (C09-0250-010) |
| 1..... | 500874..... | Housing & Lower Handle |
| 1..... | 500747..... | Washer, Axle Retainer |
| 1..... | M02-5F00-000..... | Counter 5F |
| | | Use: 4 Phillips Pan Hd Screw (#6 x 3/8) (C07-0138-050) |
| 1..... | M07-0024-000..... | Counter Gear (24-Tooth) (on Counter) |
| 1..... | M07-0012-000..... | Drive Gear (12-Tooth) (on 505761 5F Metering Wheel) |

Assembly & Operation Instructions

- 1) Slide upper handle (5008710-3) over lower handle & housing (500874) and secure at desired height using the two thumb screws in place on upper handle.
- 2) Hold handle grips with hands extended slightly forward and downward in a natural walking position and to where measurement is to begin.
- 3) Turn counter reset knob forward (clockwise) until all digits read zero.
- 4) Whenever possible, select an object in the distance toward which you can walk while traversing the ground being measured. This will enable you to maintain a straight line.
- 5) When measuring on a gravel road or rough ground, the operator should walk at a slower pace so the wheel does not bounce.
- 6) At the end of measurement, take the reading while holding handle in the same position as at the start of measurement. Note: The counter indicates the distance in feet.

Measuring Tips

 <p>Rectangle: Multiply length by with to find area. Example: length 600 ft. x with 544-1/2ft. = 326,700/43,500sq.ft. = 7.5 acres.</p>	 <p>Other Triangles: Triangles without as square corner are also half rectangles; multiply length (base) by width (height) measured perpendicular to the base, and divide by two.</p>
 <p>Trapezoid: Average the lengths of the two parallel sides and multiply by with to find area.</p>	 <p>Contour: Treat as a rectangle if the sides are parallel. If the strip is wider at one end, estimate area of triangle and add to rectangle area.</p>
 <p>Right Triangle: Since this is half a rectangle, multiply length (base) by with (height) and divide by two.</p>	  <p>Many-Side Shapes: Break down many-sided areas into shapes you can figure – rectangles, triangles – determine their areas and total.</p>

GDY-5F-PPL
 Drawing: Model5F
 February 16, 2010
 Revised Form (10/3/07)
 (5F Measuring Wheel)
 Printed in the USA