



# Illustrated Parts & Packing List

528 Gandrud Road, Owatonna, MN 55060

For a complete distributor & dealer list go to [www.gandy.net](http://www.gandy.net)

## 09073649EMS

### Tool Bar Mount


### For All Applicators

(One Per Hopper) For up to 7 -inch Square Tool Bar or up to 5-inch Diamond Tool Bar

Replaces 09066229EMS, 09070556EMS, and 09071589EMS

Telescopes From 16-inches to 24-inches

(All Hardware in Place)

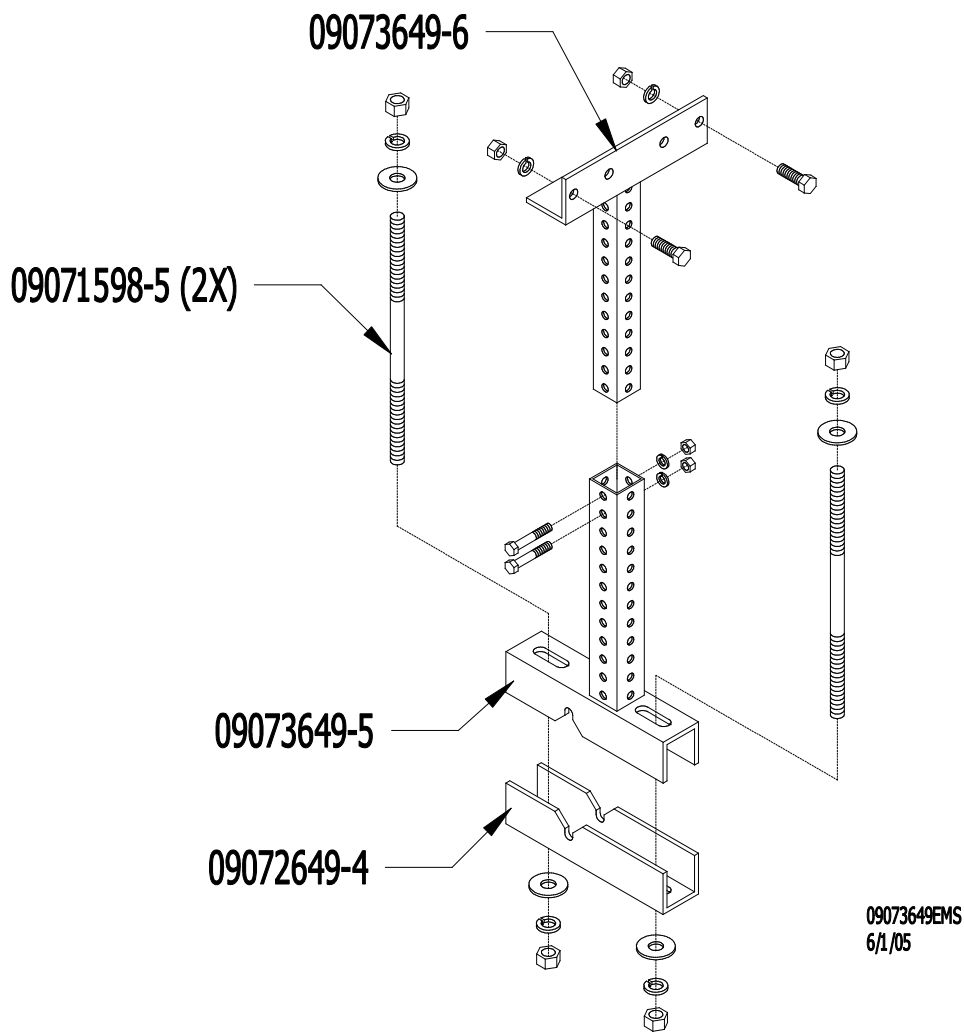

- 1.....09073649-5..... Base Post
  - Use: 2 Hex Bolt (3/8 x 2-1/4) (C03-0375-091)
  - 2 Lock Washer (3/8) (C02-0375-010)
  - 2 Hex Nut (3/8) (C01-0375-010)
- 1.....09073649-6..... Post, Telescoping
  - Use: 2 Hex Bolt (1/2 x 1-1/2) (C03-0500-062)
  - 2 Lock Washer (1/2) (C02-0500-010)
  - 2 Hex Nut (1/2) (C01-0500-010)
- 1.....09072649-4..... Clamp, Tool Bar
- 2.....09071598-5..... Stud Bolt, Tool Bar Clamping
  - Use: 4 Wrought Washer (5/8) (C02-0625-030)
  - 4 Lock Washer (5/8) (C02-0625-010)
  - 4 Hex Nut (5/8) (C01-0625-010)

**Installation Instructions:**

1. Remove hardware from stud bolt (09071598-5).
2. Install base post (09073649-5) in desired position facing to the rear of planter.  
Place clamp (09072649-4) in position on the underside of tool bar.
3. Replace stud bolt and hardware. Tighten hardware.
4. Fasten hopper to telescoping post (09073649-6) using the 1/2 x 1-1/2 hex bolts, lock washers and nuts.  
Tighten hardware.
5. Insert telescoping post into base post. Adjust hopper to desired height and fasten using the 3/8 x 2-1/4 hex bolts, lock washers and nuts as shown. Tighten hardware.

GDY-09073649EMS-PPL  
 Drawing: 09073649EMS  
 August 6, 2013  
 Revised From (3/4/09)  
 Printed in the USA