



Illustrated Parts & Packing List

528 Gandrud Road, Owatonna, MN 55060

For a complete distributor & dealer list go to www.gandy.net

09105D

Ro-Bander 5-inch

(All Hardware in Hardware Bag Unless Otherwise Specified)

One Carton Containing The Following:

- 1 0906949 Ro-Bander 5-inch
- 1 0906949-3 Cover, 5-inch Ro-Bander
- Use: 1 Decal, Ro-Bander (N02-0009-040) (in Place)
- 2 Pan Hd Sheet Metal Screws (#10 x 1-1/2) (C08-0187-150)


1 09H107D Hardware Bag Containing:

- 1 C01-0375-010 Hex Nut (3/8)
- 1 C02-0375-010 Lock Washer (3/8)
- 1 C02-0500-040 Shake Proof Washer Ext Tooth (1/2)
- 2 C08-0187-150 Pan Hd Sheet Metal Screw (#10 x 1-1/2)
- 1 C16-0375-010 Eye Bolt (3/8 x 1-inch I.D.)

1 Parts & Packing List

Installation Instructions

- 1 Secure Ro-Bander at desired height to mounting bracket below applicator using eye bolt, shake proof washer, lock washer and nut.
Note: Cover must face opposite the direction of travel.
- 2 Insert plastic tube through eye bolt, then into Ro-Bander. Cut off excess tubing.
- 3 Secure cover in place using the two sheet metal screws.

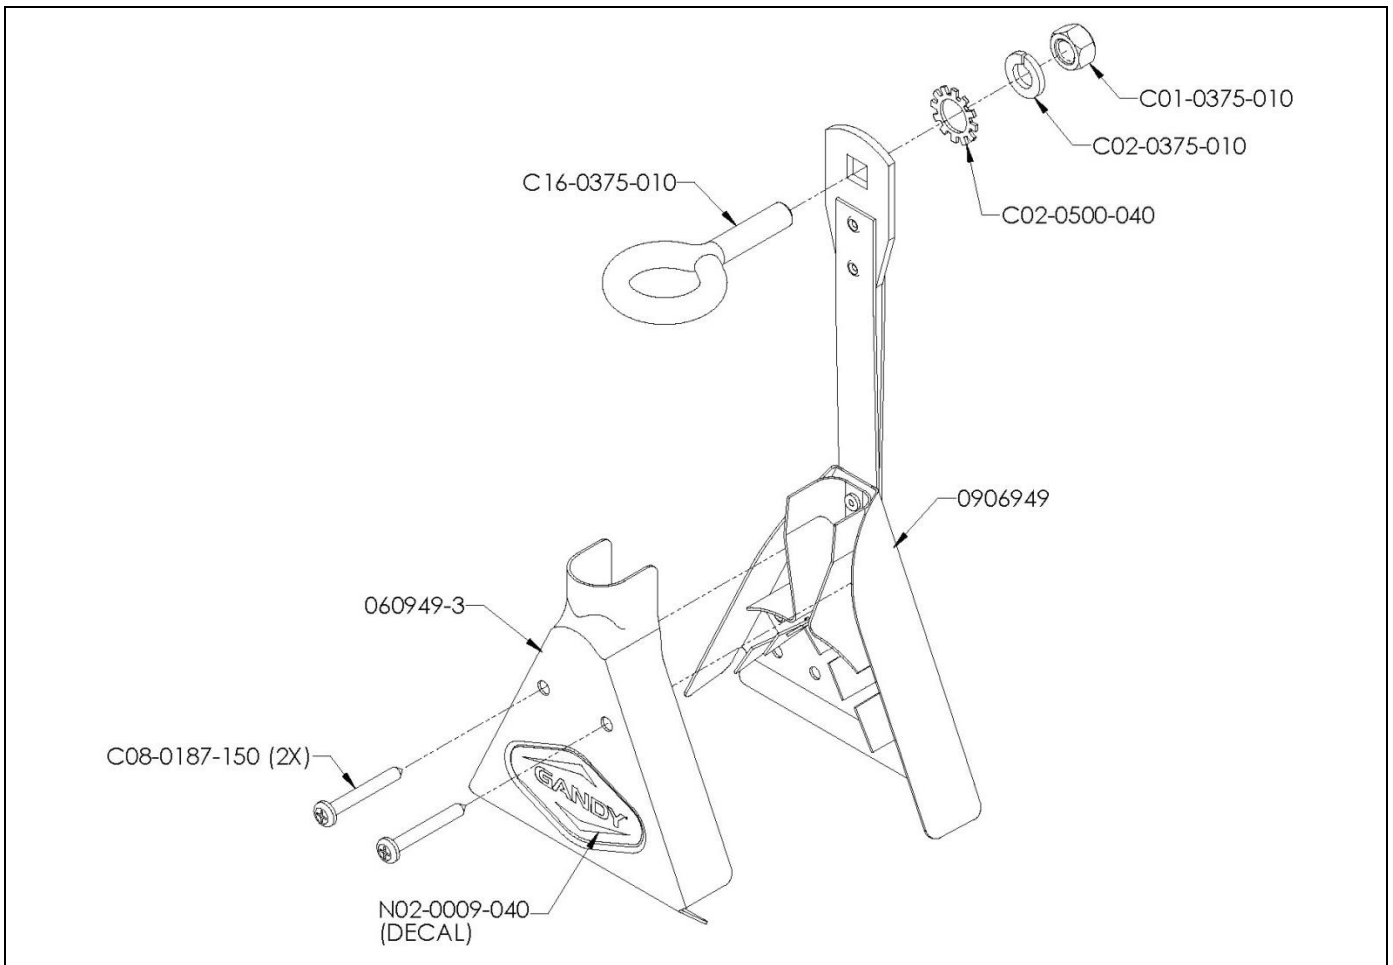

GDY-09105D-PPL
December 10, 2013
Revised From (2/21/12)
Printed in the USA